



HEADER


Miter Corners on our KD frames are of a Tab and Slot design. They lock together and are tighten in place by the Compression anchor as seen below.

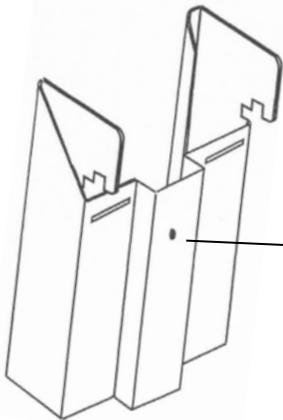

JAMB SECTION

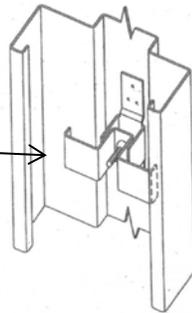


COMPRESSION ANCHOR

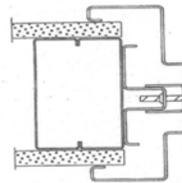


Typical Installation

STEP 1

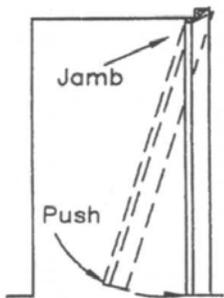


- A. PUSH TOP OF ONE JAMB OVER WALL.
- B. HOLD TOP OF JAMB IN PLACE, THEN PUSH BOTTOM IN TOWARDS AND OVER WALL

STEP 2

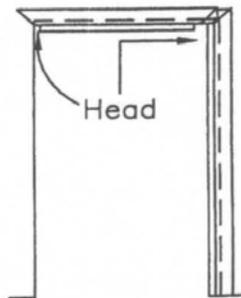


- A. POSITION FRAME HEAD OVER WALL.
- B. ALIGN HEAD TABS WITH FRAME SLOTS AND SLIDE HEADER TOWARDS JAMB TO ENGAGE THE SLOTS.

STEP 3
LEVEL

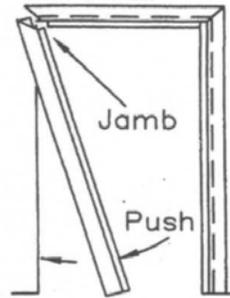

- A. PUSH TOP OF REMAINING JAMB OVER WALL AND MATE TABS IN SLOTS.
- B. PUSH BOTTOM OF JAMB IN TOWARDS AND OVER WALL.
- C. LEVEL HEADER

STEP 4
LEVEL

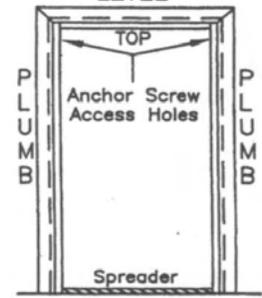

- A. ADJUST PLUMB ANCHORS WITH SCREWDRIVER
- B. PLUMB HINGE JAMB AND ANCHOR SILL WITH WOOD STRAPS PROVIDED.
- C. REPEAT WITH STRIKE JAMB